



***Specialists in Liquid
Handling Products***

**Precision Telone Pressure Kit
Instruction Guide and Setup Directions**



Everything grows better.™

For More Information Contact:

<p>Chemical Containers, INC</p> <p>413 ABC Road Lake Wales, FL 33859</p> <p>Phone: 800-346-7867 Fax: 863-638-1407 telone@chemicalcontainers.com www.chemicalcontainers.com</p>	<p>Dow Agro Sciences</p> <p>Florida Jerry Nance</p> <p>One Lake Line Drive S.E. Winter Haven. FL 33884</p> <p>Office: 863-293-4224 Cell: 863-203-2178 Nextel: 162*36*22795 jlnance@dow.com www.dowagro.com</p>	<p>Dow Agro Sciences</p> <p>Central and Northern Ala- bama, Arkansas, Mississippi, Louisiana, Missouri</p> <p>Jerome Otto 1102 Lakespur Ct.</p> <p>Scottsbluff, NE 69391 Cell: 308-641-7416 jmotto@dow.com www.telone.com</p>
<p>Chemical Containers, Inc Mike Dubose 11318 Rustic Wheel CT, Jacksonville, FL 32257 Office: 800-346-7867 Cell: 863-528-4612 Nextel: 162*24053*3 mdubose@chemicalcontainers.com www.chemicalcontainers.com</p>	<p>Dow Agro Services</p> <p>West Georgia, Southeast Alabama Chip Giles 6492 Broad Tree Court Tallahassee, FL 323127 Cell: 229-392-4653 lmgiles@dow.com www.dowagro.com</p>	<p>Dow Agro Services</p> <p>North and South Carolina, East Georgia Billy Daniels 1052 DR Hardy Cir. Dillon, SC 29536 Office: 843-774-3434 Cell: 843-230-7077 Nextel: 132*36*22795 wsdaniel@dow.com www.dowagro.com</p>







Contents

5	Product Comparison
5	Iron Work Parts
6	Flow Control Parts
7	Hose
8	Read Before Proceeding
8	Iron Works
9	Iron Works (cont.)
9	Flow Control
10	Flow Control Upgrades
10	Hoses
10	Product Hoses
11	Nitrogen Hoses
12	Premier:
12	Installing hoses without site glass stand
12	Installing hoses with glass stand
13	Finishing Set Up
13	Checking for Leaks
13	Operating Instructions
13	Filling
14	Filling Continued
14	Product Transfer - Set up
14	Calibration
14	Applying
14	Clean Out
15	Troubleshooting
16	Additional Instructions
16	Maintenance Guide
16	Nitrogen System with Filling Station
16	Nitrogen System WITHOUT a Filling Station
17	Flush Out Kit Instructions
17	Nitrogen System with Filling Station
17	Nitrogen System WITHOUT a Filling Station
17	Grower Tank






18	Helpful Hints
18	Module Tower
18	Trash Guards
18	Nitrogen Rack
19	Assembly Diagrams & Replacement Parts
19	Banjo 80 Mesh Filter
20	Banjo 120 Mesh Filter
21	6 Row Manifold Assembly
22	24" Drop Tube
23	Transfer Hose
24	Vent Hose
25	Check Valve Assembly
26	Digital Flow Meter
27	Filling Station
28	Single Filter Assembly
29	Double Filter Assembly
30	4 Row Manifold Assembly
31	On/Off Valve - Standard Kit
32	Nitrogen Regulator
33	Transfer Regulator
34	Site Glass and Stand
35	Site Glass Assembly
36	120 Gallon Tank
37	250 Gallon Tank
38	On/Off Throttling Valves - Premier Kit
39	Single Filter Only

Product Comparison

Iron Work Parts

	Standard	Premier	
Tank(120, 250, 500 gallon options)	YES	YES	
Drop Tubes & Guards	YES	YES	
Foot Blocks	YES	YES	
Bulk Head Module (check valve, orifice body, quick connect)	Bulk head modules are used only with 1/8" black hose		
Filling Station	YES	YES	
Module Tower (stand)	1 TOWER	2 OR 3 TOWERS WITH STACK FOLD	

Flow Control Parts

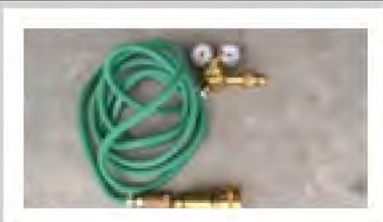	Standard	Premier	
Manifold module	YES	YES	
Digital Flow Meter (with turbine)	NO	YES	
On / Off and throttle valve with controller	ON / OFF VALVE ONLY	YES	 KZ Valve
Site Glass	YES	YES	
Filter module	SINGLE FILTER 100 MESH	DOUBLE FIL- TERS 80 AND 120 MESH	
Nitrogen Application Regulator	YES	YES	
Nitrogen Transfer Regulator	OPTIONAL	YES	

Hose

	Standard	Premier	
1/8" hose (red, yellow, or black)		YES	
3/4" Fill hose		YES	
1/2" Supply hose		YES	
3/4" Transfer hose		YES	
1/2" Filter drain & relief valve hose		YES	
3/4" Vent hose		YES	

Read Before Proceeding

The following are suggestions on how to put your Pressure Kit together. You may find quicker and easier ways to install this kit. You may change the process/order of construction, but you should use the approved equipment. Read through the entire manual before starting! For tips on installing, see the Helpful Hints at the end of this manual.

Iron Works

- Design and install rack for holding metal product tank and nitrogen bottle (These materials are not included in either the standard or premier kit).
- The weight of Telone II is 10.2 lb./gallon. Be sure to make the tank frame sturdy enough to handle the weight and vibration.
- The tanks may be mounted on the equipment or tractor.
- When installing the nitrogen rack, pay attention on how high it is placed to ensure accessibility and ground clearance.
- Nitrogen rack can be designed to mount bottle vertical or horizontal. In either case ensure the nitrogen regulator is protected from possible damage.
- Mount metal tank on to the rack and secure.
- Attach Filling Station to the implement or tractor in a location that is easily accessible to hook up all necessary supply hoses.



ONLY USE NITROGEN TO PRESSURIZE TANK



Figure 1.

It is suggested that all shank welding be done with the shank removed from the implement, once the length of the tubing is determined

1. Find 1"x2"x6" metal stock (foot blocks) and cut to fit the heel of shank so it runs parallel with the ground. Weld foot blocks to the heel of the shank. Position above the ware point on the ripper point.
2. Determine the position of the tube guards on the back of the shank. Place the first tube guard no more than 1" away from foot block.
3. Determine the length of the drop tube. Tack weld and trip shank to check for clearance and position before continuing. You may decide to add protection (see picture) to prevent drop tube damage.
4. When adjusting length of drop tube cut off the bottom (non-threaded end). Pinch the bottom of the tube and grind out an opening to allow product flow.

Protection



Tube guards



The tube guards may be welded to the back of the shank and then the drop tube welded to the tube guards. Or weld the guards to the tube and then to the back of the shank.

Figure 2.

(Continued on page 9)



Figure 3.

Iron Works (cont.)

5. If using black 1/8" hoses - Weld bulk head mounting bracket onto frame to hold Orifice body/Check valve assembly. Then put quick connects on both sides of the orifice body.
6. When using yellow or red 1/8" hose an orifice body/check valve assembly is not required. Hose will connect directly to the top of the drop tubes.
7. Attach quick connects to top of drop tubes.
8. Weld the module tower off center on the implement so that site glass and manifold are in view of the tractor operator. (See "Helpful Hints" on page 18)

Flow Control

- Find the filter module and slide it onto the module tower and secure close to the bottom of the tower. Leave enough space to attach the filter drain hoses. (If the dual filter module upgrade is used, place it in the same position as above).
- Following the placement of the filter on the module tower, slide on the on/off valve. Secure this on/off valve in place. (If the single filter module is not being used, go to "Flow Control Upgrades" on page 10 for instructions)
- Next slide on the 4 or 6 port manifold and secure at the top of the module tower
- Multiple manifolds will require additional stands
- Locate on/off switch and attach to module on/off valve and run the cord and switch to the tractor cab
- Leave plenty of loose cord to allow securing the cord the tractor and allow the implement to operate with out pulling on the cord
- Position switch box to the desired location. Then open switch box and cut

Single filter – Standard kit



Dual filter – Premier kit



Figure 4.

Flow Control Upgrades

- Following the placement of the filter on the module tower, slide on the turbine module. Secure in place.
- Next slide on the on/off and throttle module and secure to the module tower.
- Finally, slide on the 4 or 6 port manifold and secure.
- Attach the digital meter cable to the turbine.



- Attach the control switch to the KZ valves and place in an accessible location in the cab
- Place the site gauge stand at a spot that can be easily seen by the driver.



Figure 5.

- Using the same size hose, connect the filter to the site glass and secure with hose clamps.
- Connect the on/off valve to the manifold and secure with hose clamps.
- Secure 1/2" hose from bottom of filter to frame
- String out the 1/8" hose from manifold by following the frame to the farthest drop tube. Cut this hose and use as a pattern for the rest of the hoses.
- Cut all 1/8" hoses the same length. It is suggested that all red or yellow hose to be cut to 15 feet in length.
- Attach all 1/8" hoses from manifold to the check valve/orifice body. (See upgrade section for attachment of yellow or red 1/8" hoses)
- Attach the black 1/8" hose to the check valve/orifice body and then run a short black 1/8" hose to the quick connect on the drop tube.
- Be sure to place the hoses in an area safe from being pinched during implement operation.
- Carefully coil up all excess hose and secure. Coils should be approximately 1 foot in diameter to ensure proper flow.

Hoses

Product Hoses

- On the Filling Station write a "P" on the side with the two valves and a "N" on the side with one valve.
- Locate the 3/4" hose and run from the 3/4" barb from the Filling Station to the tank outlet marked with a "P". Cut to proper length and secure with hose clamps.
- Connect 1/2" hose from hose barb on Filling Station to the filter located on the module tower and secure with hose clamps.



Figure 6.

Nitrogen Hoses



- Install nitrogen tank in nitrogen rack
- Attach regulator to nitrogen tank
- Run nitrogen hose to nitrogen valve at the Filling Station

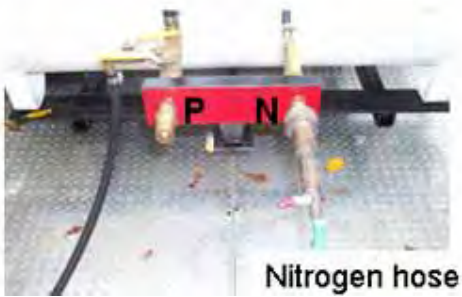


Figure 7.

Premier:

Installing hoses without site glass stand

- From the filter attach the 1/2" supply hose to the turbine.
- Connect the turbine to the throttle valve (red indicator).
- Connect the throttle valve to the on/off valve (yellow indicator).
- Connect the on/off valve to the manifold.



Figure 8.

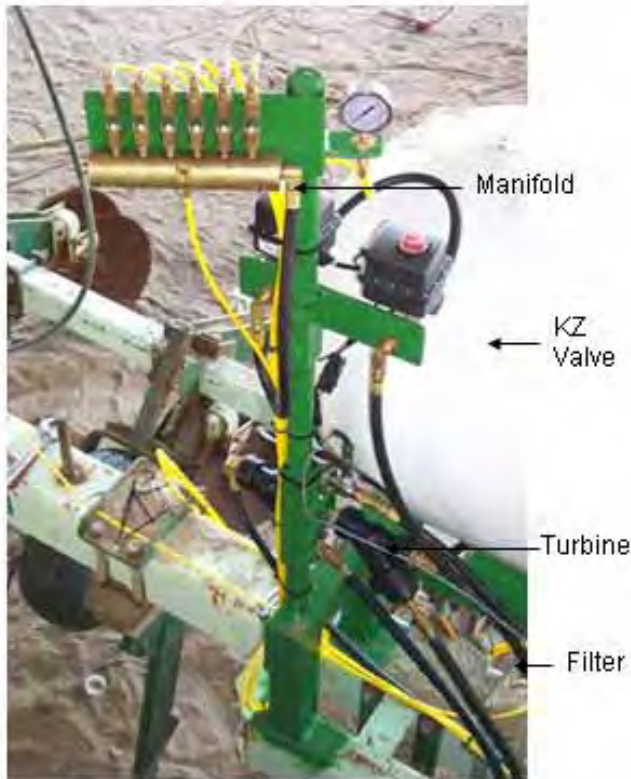


Figure 9.

Installing hoses with glass stand

- From the filter attach the 1/2" supply hose to the turbine.
- Connect the turbine to the site gauge & stand.
- Due to the long length of hose required to connect to the site stand, DO NOT attach the hose to a plastic fitting. Always attach it to metal fittings for
- Connect the site gauge to the (KZ valves) throttle (red) and then to the on/off valve (yellow).
- Connect the on/off valve to the manifold.

Finishing Set Up

- Locate orifice body (if using), separate orifice body, place desired orifice within housing with numbered side up, close and tighten.
- If orifice bodies are not being used, connect the red or yellow hose directly to the quick connect on top of the drop tube



Checking for Leaks

- Pressurize the tank with desired amount of nitrogen.
- Check for leaks at the fittings with soapy water. If bubbles appear, tighten fitting to seal. If it will not seal, depressurize the tank and reseal the fitting.
- Once the system is tested, open all valves and ensure flow of nitrogen to the drop tubes.



Figure 10.

Operating Instructions



ONLY USE NITROGEN TO PRESSURIZE TANK

Filling

- Let off all pressure in the tank that was just leak tested by connecting the vent hose to the nitrogen coupler at the Filling Station and open the vent valve.
 - Connect the transfer hose from the pig to the product valve at the Filling Station.
 - Open the fill line to the grower tank and close the product line to the filter
 - Make sure the product valve on top of the grower tank, is open.
 - Pressurize the pig with nitrogen
 - Open the product valve on the pig.
 - Transfer the contents of the pig into the grower tank.
 - Do not over fill
 - Once the product has been transferred to the grower tank, close the pig product valve.
 - Disconnect the transfer hose
 - Close the nitrogen line at the Filling Station and disconnect the vent hose
 - Reattach the nitrogen bottle to the nitrogen valve at the filling station.
 - Open the nitrogen bottle and set the regulator to the desired pressure
 - Open the nitrogen line at the Filling Station to pressurize the grower tank
 - Open the supply line to the filter. Be sure the applicator on/off valve on the tower is in the off position.
- (Continued on Next Page)

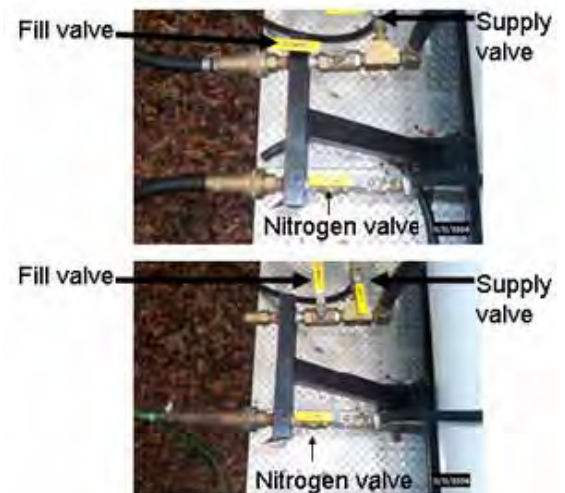


Figure 11.

Filling Continued

- Filling set up:
 - Fill valve to tank is open.
 - Supply valve to filter is closed
 - Nitrogen valve is open
- Applying set up:
 - Fill valve is closed.
 - Supply valve is open
 - Nitrogen bottle is attached to nitrogen valve and the valve is open

Product Transfer - Set up



Figure 12.

Calibration

- See the enclosed Orifice Guide or Flow Sheet for calibration instructions
- When determining MPH, put the implement in the ground and utilize GPS or time the tractor for accurate speed. DO NOT use the tractor tachometer as the only source to determine MPH.

Applying

- Once calibration is complete and accurate, we are ready to apply.
- Pressurize the grower tank to the desired pressure. Care should be taken not to over pressurize as excess will have to be bled off.
- Ensure the applicator on/off valve is in the off position
- Turn on the supply valves to the filter
- Once in the field turn on the applicator on/off switch and beginning applying product

Clean Out

- At the end of the season and when grower tank is empty. Blow out all lines into the ground.
- Turn off fill line to grower tank. Turn on supply line to filter. Attach Nitrogen line from regulator to the product coupler at the Filling Station. Open applicator on/off switch and proceed to blow out all lines while operating the rig in the field
- Once system is cleaned out, leave grower tank pressurized (10 - 15 lbs nitrogen pressure).
- Keep the grower tank sealed at all times. If it is not sealed it will rust and a new tank will need to be purchased.



ONLY USE NITROGEN TO
PRESSURIZE TANK

Troubleshooting

- **Product not flowing to site glass**
 - Check to make sure the On/Off switch is operating
 - Check to make sure the valves are open at the grower tank
 - Check to make sure there is product in the grower tank
 - Check to make sure the grower tank is pressurized. If the tank is not pressurizing, inspect the check valve on the nitrogen line.
 - Clean out the filter
- **Product will not flow from pig to grower tank**
 - Check to make sure the Filling Station vent line is connected and the valve is open
 - Check to make sure the pig is pressurized
 - Check to make sure the proper valves are open
- **Product will not flow evenly to each shank**
 - Ensure all lines are the same length
 - Check to make sure the coiled 1/8" hose is not coiled any tighter than in 1 foot diameter coils.
 - If check valve/orifice body is used be sure to run a minimum of 10 PSI at the check valve/orifice body assembly.
 - Check the condition of the diaphragm check valve. Check for bubbles/blistering and dust/dirt. Replace if necessary.
 - If screens are used, they must all be clean
 - Ensure all drop tubes are free and clear of debris
- **Digital meter is not showing a consistent flow**
 - Check to make sure the throttle & on/off valve is located after the turbine.
 - Be sure there are no sharp turns in the supply line on either side of the turbine.
 - Adjust nitrogen pressure to improve sensitivity of product flow.

Additional Instructions

- Follow proper calibration methods
- Use the proper Personal Protective Equipment
- Keep nitrogen pressure on the grower tank at all times
- Each year , inspect all components prior to application and replace questionable parts.
- Calibrate each year and double check acres treated to the amount of product applied.
- **Do not place any product lines or gauges containing product in the tractor cab**

Maintenance Guide

Once application of Telone is complete, purge all Telone lines with nitrogen by following these steps¹

Nitrogen System with Filling Station

- Attach nitrogen line to the product side of the filling station
- Shut off product ball valve at the top of the tank
- Open both valves at the product side of the filling station
- Open the on-off valve and regulating valve² to the system
- Open nitrogen supply to flush out remaining Telone in the line
 - Continue flushing until no Telone is seen coming from the outlet
 - Open valve on the bottom of the filter body to remove any remaining Telone in the filter body
- Turn off the nitrogen valve
- Remove filter element from filter body or bodies
 - Rinse element with diesel fuel and replace back into the filter body
- To improve the longevity of your pressure system it is suggested that you also flush the system with diesel fuel using the same steps from above
 - Check with your Certified Dealer or Chemical Container Inc on the availability of a diesel Flush Out Kit.
 - Instructions on the use of the Diesel Flush Out Kit are included in the guide
- Once purging is complete disconnect all hoses and close ball valves.
- Seal all open hoses by using duct tape to prevent intrusion by insects

Nitrogen System WITHOUT a Filling Station

- Remove the dry lock disconnect from the product side at the top of the tank
- Using a double male dry lock connector, insert into the female dry lock connector at the end of the hose going to the filter.
- Connect the female dry lock disconnect from the nitrogen bottle to the other side of the double male dry lock connector.
- Open the on-off valve and regulating valve to the system²
- Open nitrogen supply to flush out remaining Telone in the line
 - Continue flushing until no Telone is seen coming from the outlets
 - Open valve on the bottom of the filter body to remove any remaining Telone in the filter body
- Turn off the nitrogen valve
- Remove filter element from filter body or bodies
 - Rinse element with diesel fuel and replace back into the filter body
- To improve the longevity of your pressure system it is suggested that you also flush the system with diesel fuel using the same steps from above
 - Check with your Certified Dealer or Chemical Container Inc on the availability of a diesel Flush Out Kit.
 - Instructions on the use of the Diesel Flush Out Kit are included in the guide
- Once purging is complete disconnect all hoses and close ball valves.
- Seal all open hoses by using duct tape to prevent intrusion by insects

¹ If using orifice plates, remove before flushing/purging system

² This only applies to the Premier System Equipment Maintenance

Flush Out Kit Instructions³

- If using orifice plates, remove before flushing/purging system
- Fill Flush Out Kit with diesel
- Connect positive and negative electrical terminals of the Flush Out Kit to a battery

Nitrogen System with Filling Station

- Attach Flush Out Kit line to the product side of the filling station
- Shut off product ball valve at the top of the tank
- Open both valves at the product side of the filling station
- Open the on-off valve and regulating valve⁴ to the system (connect to an electrical source to operate)⁴
- Turn on switch to the Flush Out Kit to begin purging process
Continue flushing for two minutes after diesel is seen coming from the outlets
- Turn off the Flush Out Kit switch
- Once purging is complete disconnect all hoses and close ball valves.
- Seal all open hoses by using duct tape to prevent intrusion by insects.

Nitrogen System WITHOUT a Filling Station

- Remove the dry lock disconnect from the product side at the top of the tank
- Using a double male dry lock connector, insert into the female dry lock connector at the end of the hose going to the filter.
- Connect the female dry lock disconnect from the Flush Out Kit to the other side of the double male dry lock connector.
- Open the on-off valve and regulating valve to the system⁵
- Switch on Flush Out Kit to start flow of diesel
Continue flushing until no Telone is seen coming from the outlets
Open valve on the bottom of the filter body to remove any remaining Telone in the filter body
- Turn off the Flush Out Kit switch
- Once purging is complete disconnect all hoses and close ball valves.
- Seal all open hoses by using duct tape to prevent intrusion by insects

Grower Tank

- Do Not leave the tank open to the atmosphere
- Always maintain nitrogen pressure on the tank
- Always use nitrogen as the gas in the tank
- Always filter product going in and out of the tank
- Never put any other liquid in the tank other than Telone* products
- Do not weld or cut the tank

3 If using orifice plates, remove before flushing/purging system

4 This only applies to the Premier System

5 This only applies to the Premier System

Helpful Hints

Module Tower

When attaching the module tower, you may want to put on a receiver post first for durability and removal for stor-

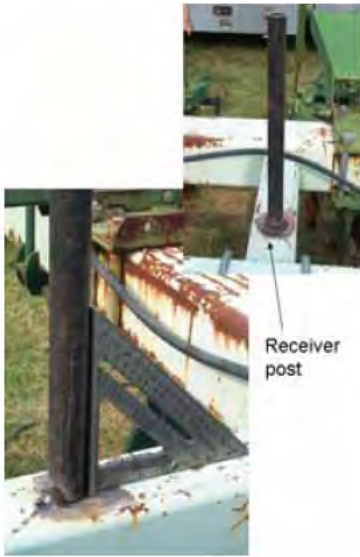


Figure 14.



age.

Figure 13.

Trash Guards

Trash guards may be attached to prevent the soil and trash from rapping around product hose and causing damage.



Figure 15.



Receiver spot


Figure 16.


Nitrogen Rack

- When designing the nitrogen rack, make a receiver spot for placing the nitrogen tank.
- This will help maintain control of the nitrogen bottle as you lift it into place

Banjo 80 Mesh Filter

NOTES: PART BLS15080V FOR
CCIEZFILTERMODA

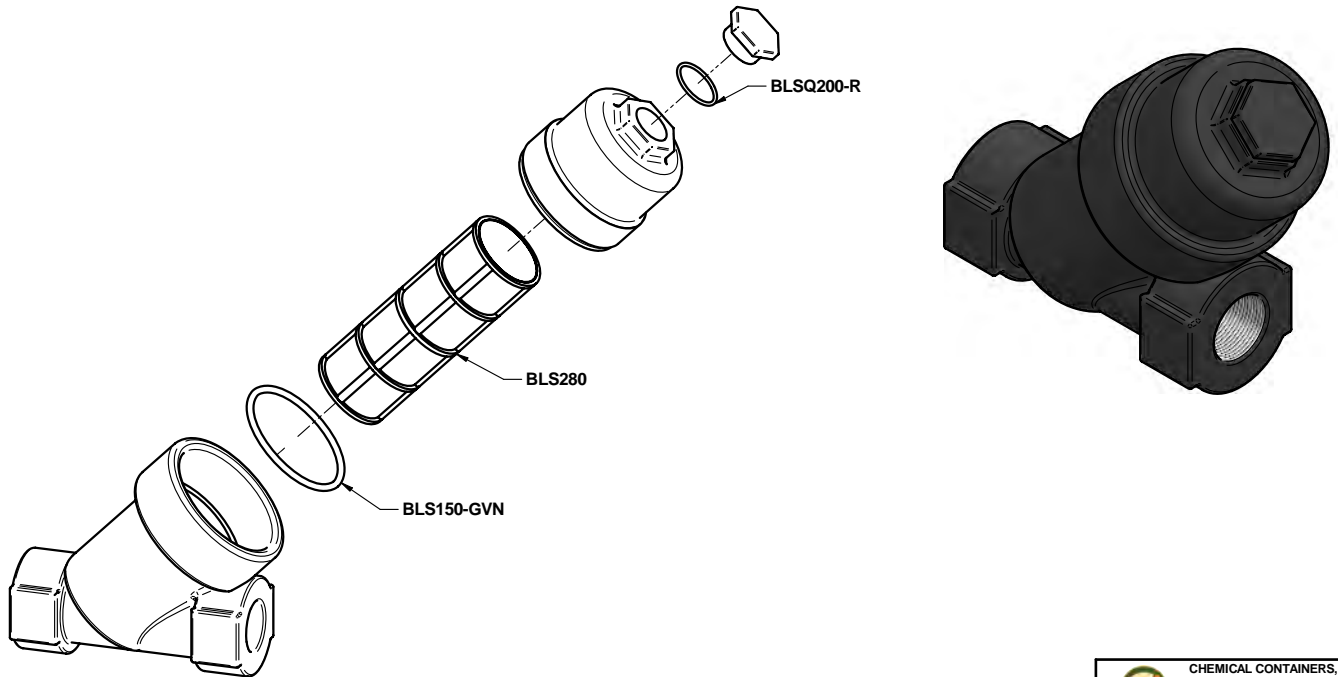



 CHEMICAL CONTAINERS, INC. LAKE WALES, FLORIDA, 33859 TEL: 863-638-1407 FAX: 863-638-1863		
TITLE		
1 1/2" POLY STRN BOM,VITON GASKET		
SIZE	DWG NO	REV
B	BLS15080V	00
COMPONENT DRAW NG		
SCALE: N.A.	LAYOUT SHEET	SHEET 1 OF 1

M:\ENGINEERING\COMPONENTS\CCITELONE\TELONE PRESSURE KIT\BLS15080V.dft

Banjo 120 Mesh Filter

NOTES: PART : BLS150120V FOR
CCIEZFILERMODA


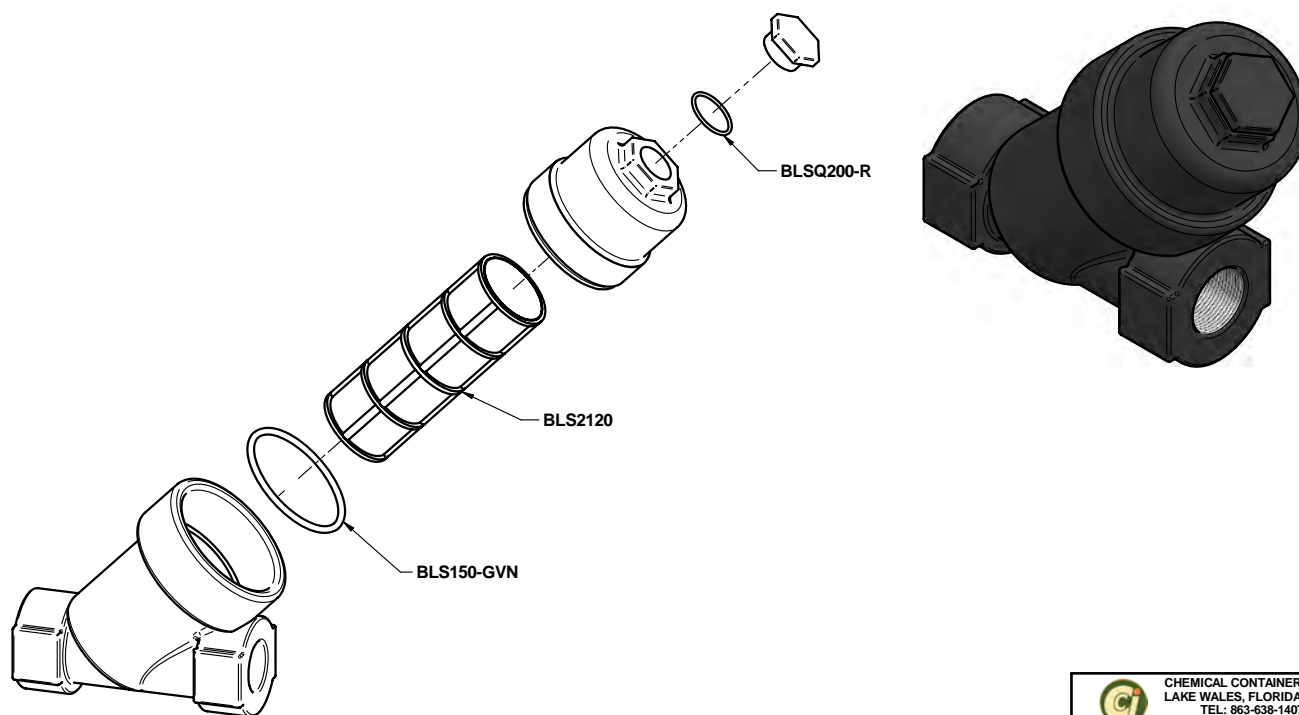



 CHEMICAL CONTAINERS, INC. LAKE WALES, FLORIDA, 33859 TEL: 863-638-1407 FAX: 863-638-1863		
TITLE		
1 1/2" POLY STRN BOM, VITON GASKET		
SIZE	DWG NO	REV
B	BLS150120V	00
COMPONENT DRAWING		
SCALE: N.A.	LAYOUT SHEET	SHEET 1 OF 1

M:\ENGINEERING\COMPONENTS\CC\TELONE\TELONE PRESSURE KIT\BLS150120V.dft

6 Row Manifold Assembly

NOTES:

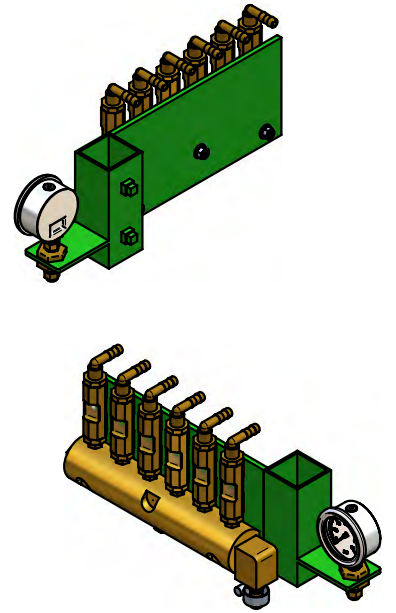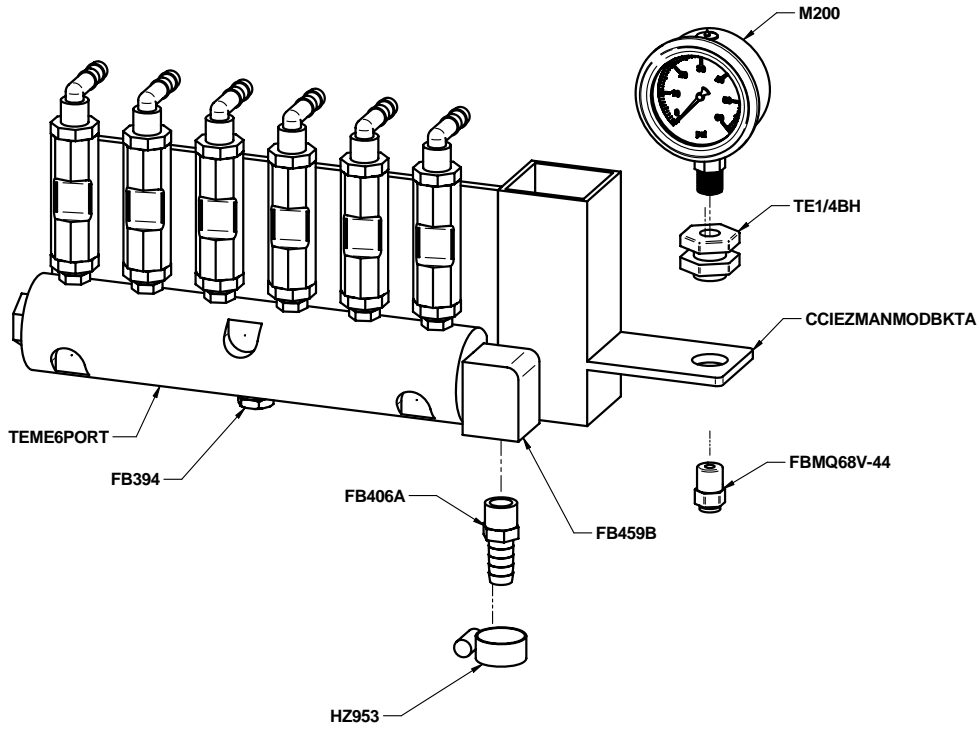



 CHEMICAL CONTAINERS, INC. LAKE WALES, FLORIDA, 33859 TEL: 863-638-1407 FAX: 863-638-1863		
TITLE		
MANIFOLD MODULE 6 PORTS		
SIZE	DWG NO	REV
B	CCIEZMANMOD - 6	00
COMPONENT DRAWING		
SCALE: N.A.	LAYOUT SHEET	SHEET 1 OF 1

M:\ENGINEERING\COMPONENTS\CCITELONE\TELONE PRESSURE KIT\CCIEZMANMOD - 6.dft

24" Drop Tube

NOTES:


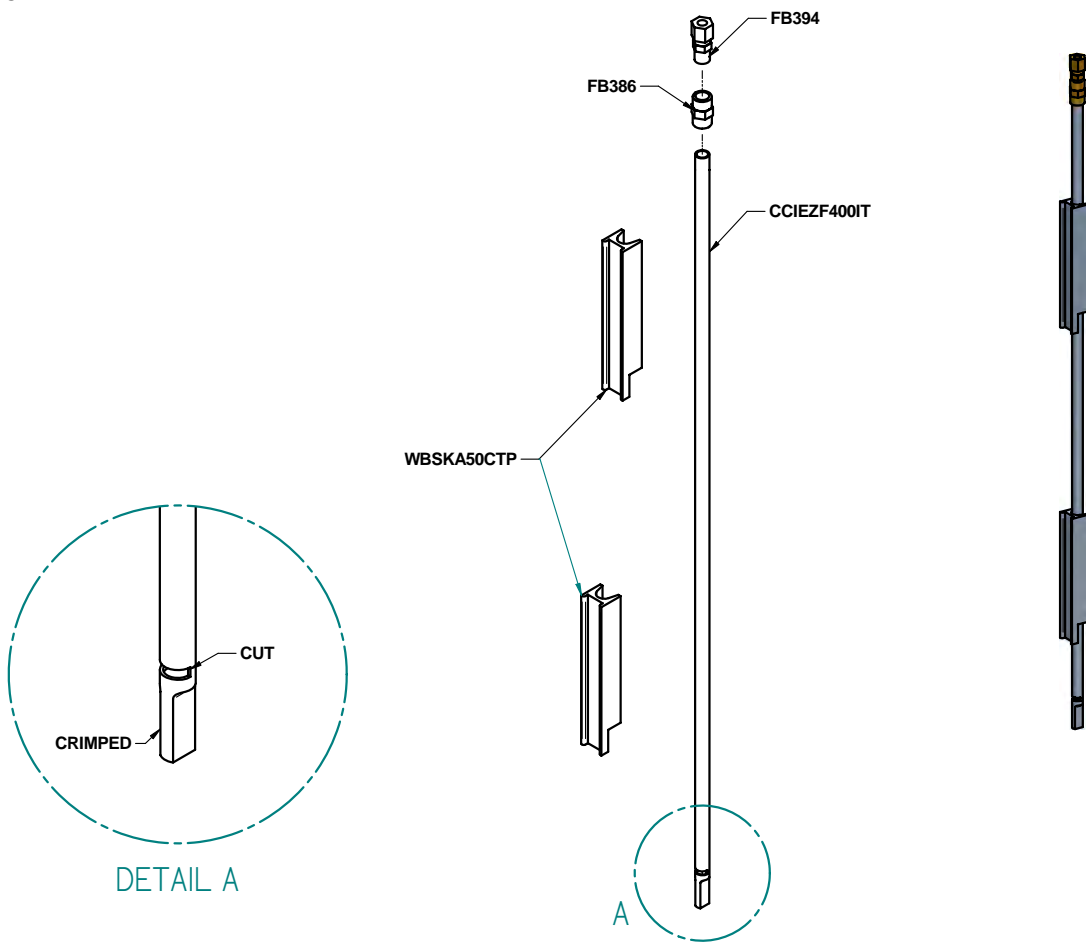



 CHEMICAL CONTAINERS, INC. LAKE WALES, FLORIDA, 33859 TEL: 863-638-1407 FAX: 863-638-1863		
TITLE		
DROP TUBE 24" WTUBE GUARDS		
SIZE	DWG NO	REV
B	CCIEZ24TUBEASSY	00
COMPONENT DRAWING		
SCALE: N.A.	LAYOUT SHEET	SHEET 1 OF 1

M:\ENGINEERING\COMPONENTS\CC\TELONE\TELONE PRESSURE KIT\CCIEZ24TUBEASSY.dft

Transfer Hose

NOTES:

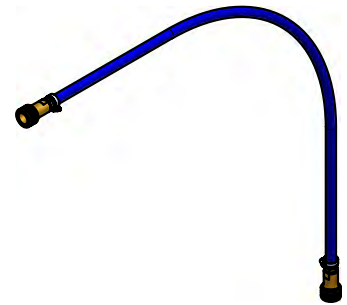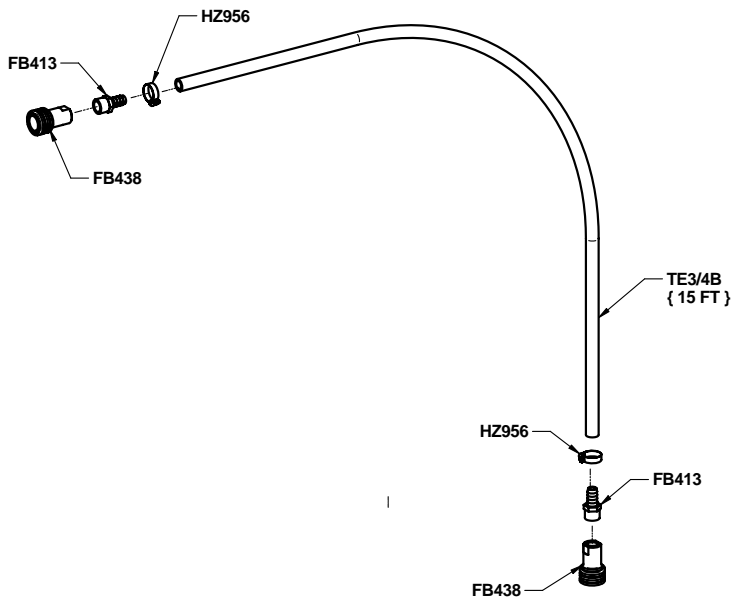


 CHEMICAL CONTAINERS, INC. LAKE WALES, FLORIDA, 33859 TEL: 863-638-1407 FAX: 863-638-1863		
TITLE		
3/4" X 15 FT TRANS HOSE W/COUP		
SIZE	DWG NO	REV
B	CCIEZ34TRANHOSE	00
COMPONENT DRAWING		
SCALE: N.A. LAYOUT SHEET		SHEET 1 OF 1

M:\ENGINEERING\COMPONENTS\CC\ITELONE\CCIEZ34TRANHOSE.dft

Vent Hose

NOTES:


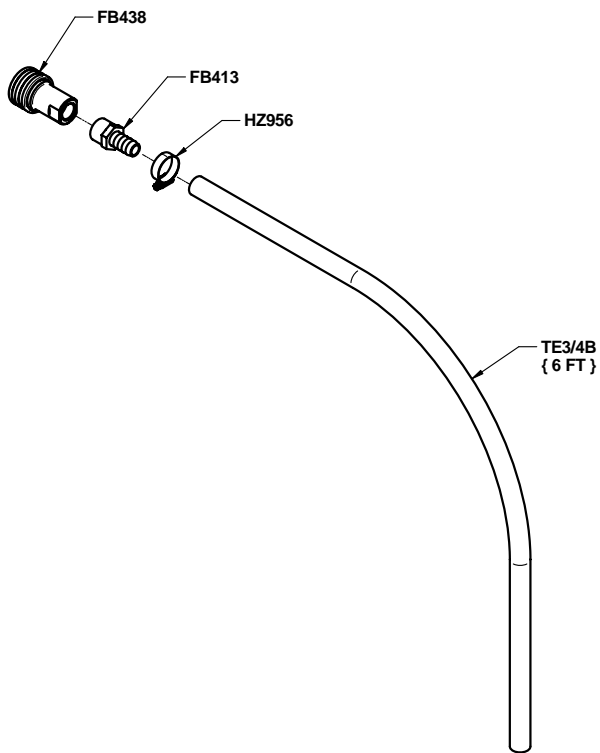



 CHEMICAL CONTAINERS, INC. LAKE WALES, FLORIDA, 33859 TEL: 863-638-1407 FAX: 863-638-1863		
TITLE		
3/4" X 6 FT VENT HOSE ASSY W/COUP		
SIZE	DWG NO	REV
B	CCIEZ34VENTHOSE	00
COMPONENT DRAWING		
SCALE: N.A. [LAYOUT SHEET]		SHEET 1 OF 1

M:\ENGINEERING\COMPONENTS\CC\TELONE\CCIEZ34VENTHOSE.dft

Check Valve Assembly

NOTES:

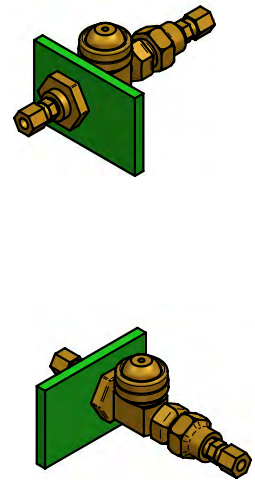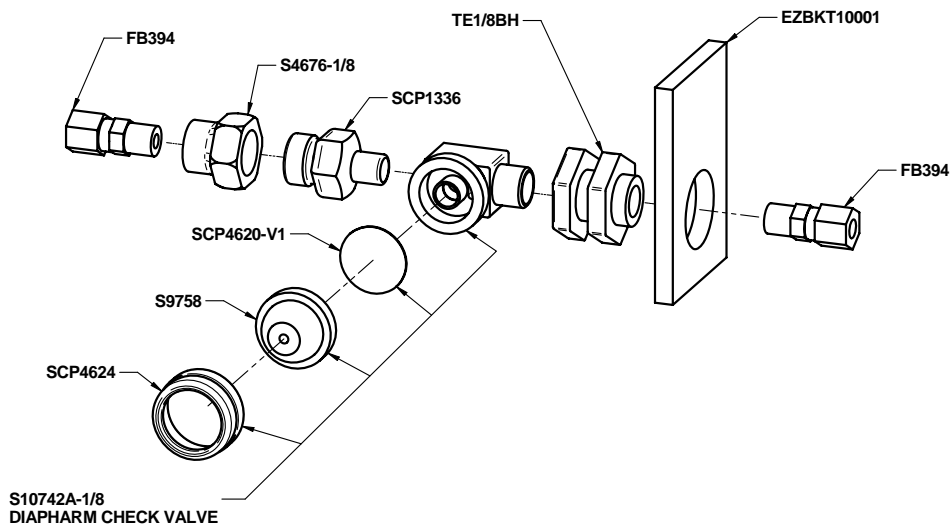



 CHEMICAL CONTAINERS, INC. LAKE WALES, FLORIDA, 33859 TEL: 863-638-1407 FAX: 863-638-1863		
TITLE		
BULK HEAD MODULE		
SIZE	DWG NO	REV
B	CCIEZBULKMOD	00
COMPONENT DRAWING		
SCALE: N.A. LAYOUT SHEET SHEET 1 OF 1		

M:\ENGINEERING\COMPONENTS\CC\TELONETELONE PRESSURE KIT\CCIEZBULKMOD.dft

Digital Flow Meter

NOTES:


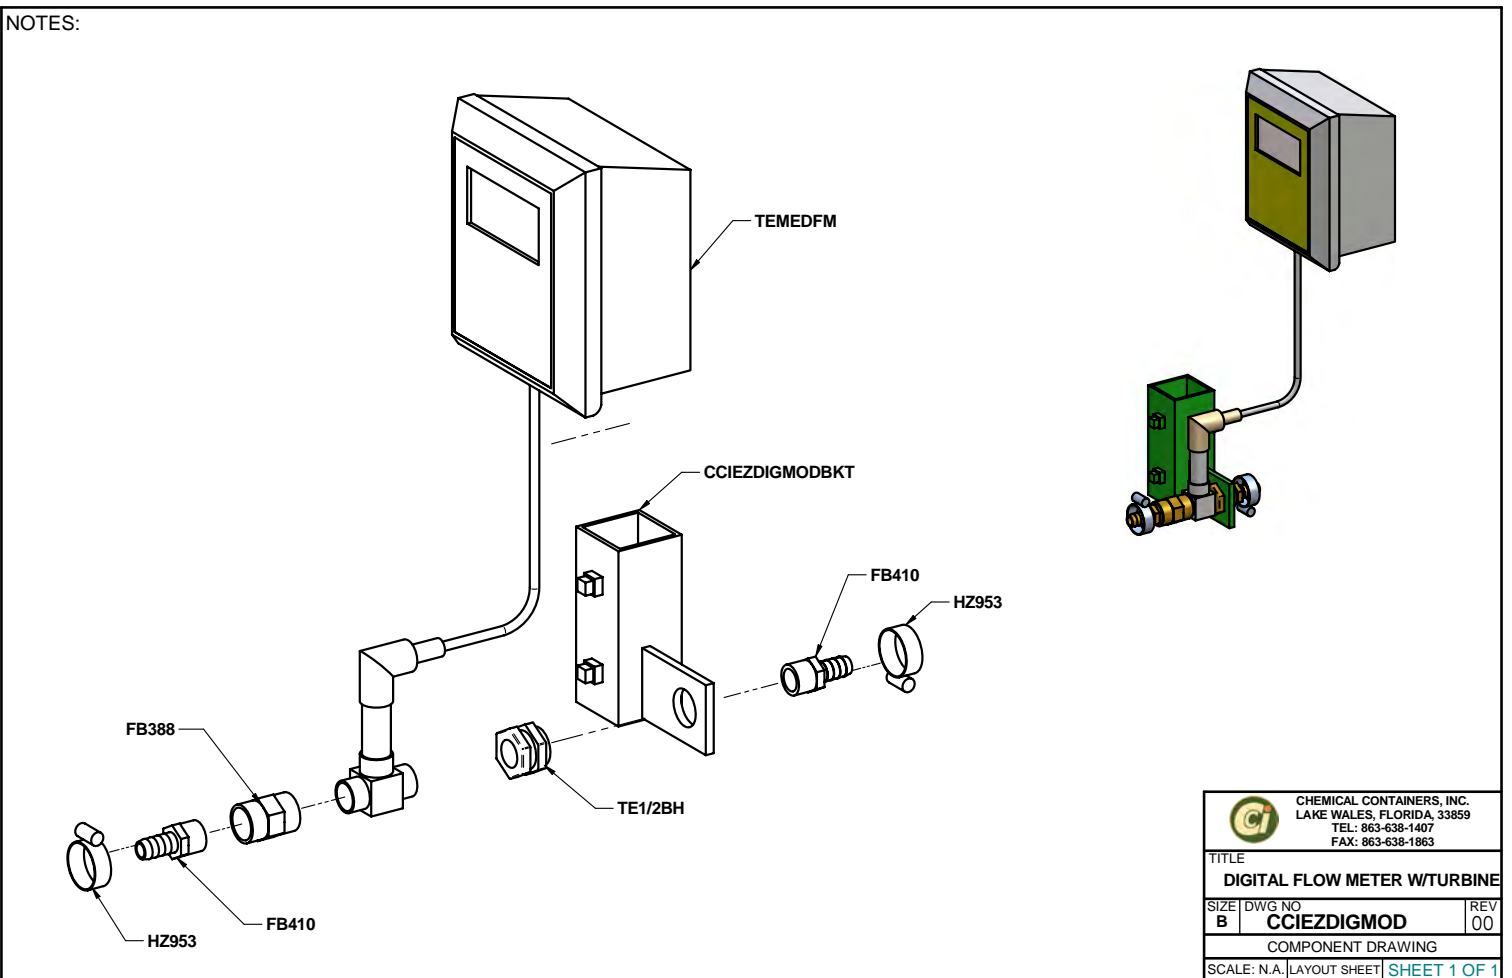



 CHEMICAL CONTAINERS, INC. LAKE WALES, FLORIDA, 33859 TEL: 863-638-1407 FAX: 863-638-1863		
TITLE		
DIGITAL FLOW METER W/TURBINE		
SIZE	DWG NO	REV
B	CCIEZDIGMOD	00
COMPONENT DRAWING		
SCALE: N.A.	LAYOUT SHEET	SHEET 1 OF 1

M:\ENGINEERING\COMPONENTS\CC\TELONETELONE PRESSURE KIT\CCIEZDIGMOD.dft

Filling Station

NOTES:

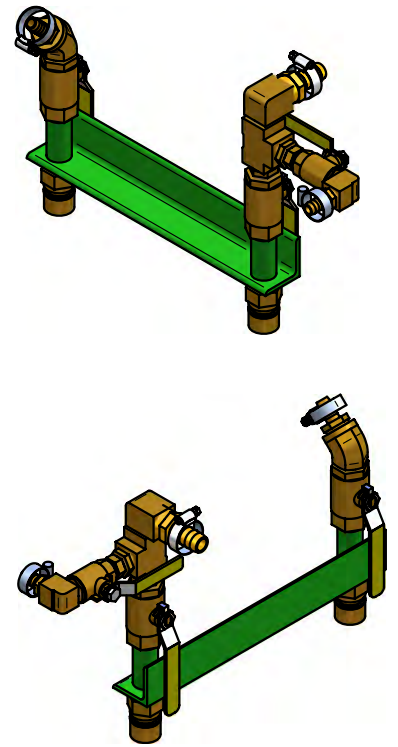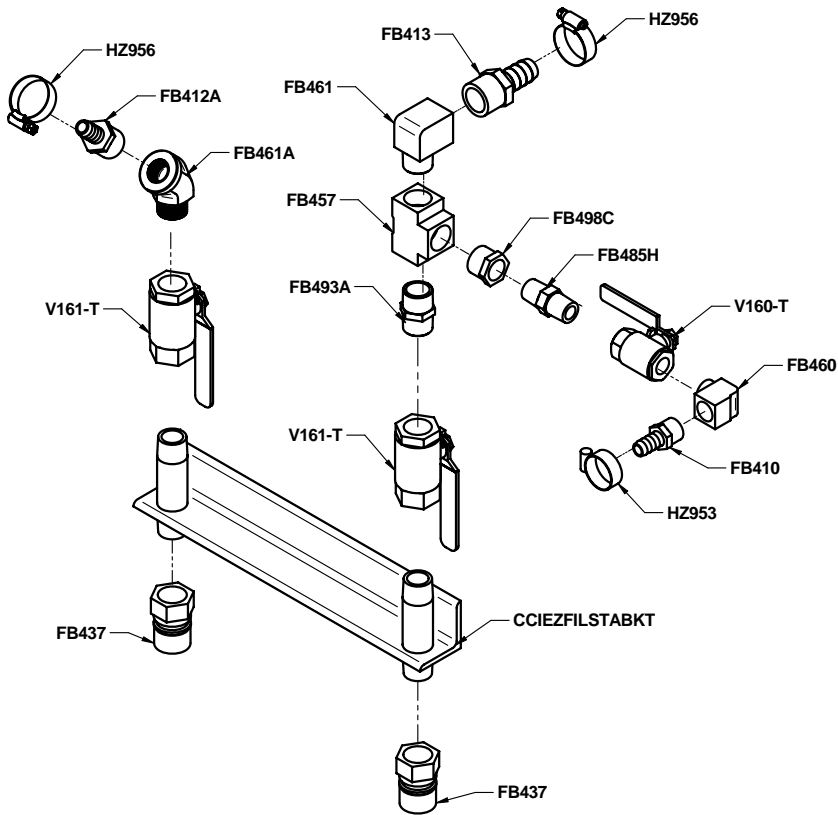



 CHEMICAL CONTAINERS, INC. LAKE WALES, FLORIDA, 33859 TEL: 863-638-1407 FAX: 863-638-1863		
TITLE		
FILLING STATION		
SIZE	DWG NO	REV
B	CCIEZFILSTA	00
COMPONENT DRAW NG		
SCALE: N.A. LAYOUT SHEET SHEET 1 OF 1		

M:\ENGINEERING\COMPONENTS\CCITELONE\TELONE PRESSURE KIT\CCIEZFILSTA.dft

Single Filter Assembly

NOTES:

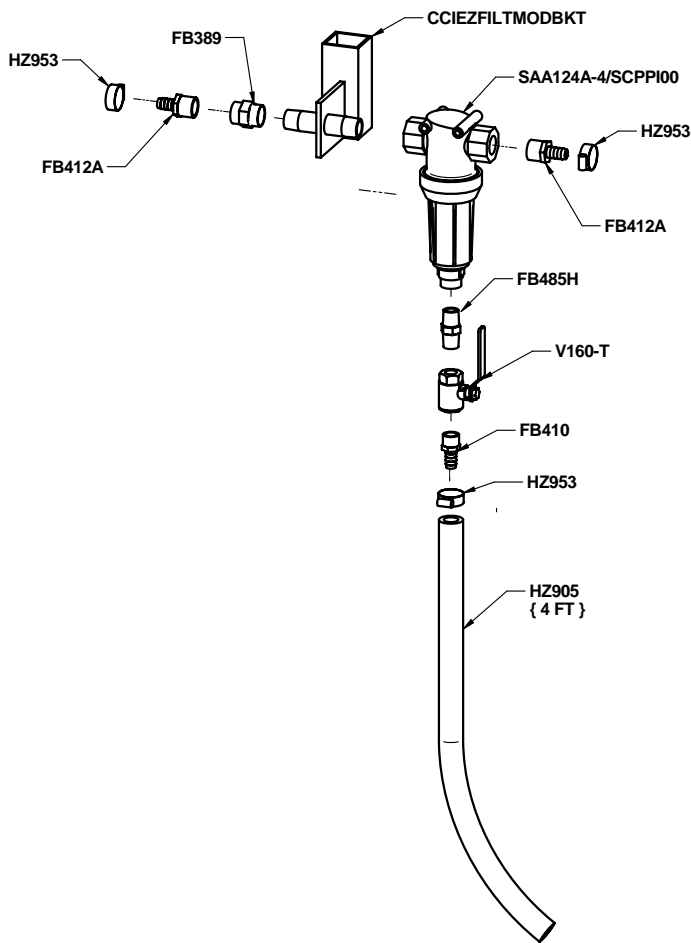



 CHEMICAL CONTAINERS, INC. LAKE WALES, FLORIDA, 33859 TEL: 863-638-1407 FAX: 863-638-1863		
TITLE		
SINGLE FILTER MODULE		
SIZE	DWG NO	REV
B	CCIEZFILTMOD	00
COMPONENT DRAWING		
SCALE: N.A.	LAYOUT SHEET	SHEET 1 OF 1

M:\ENGINEERING\COMPONENTS\CCITELONE\CCIEZFILTMOD.dft

Double Filter Assembly

NOTES:

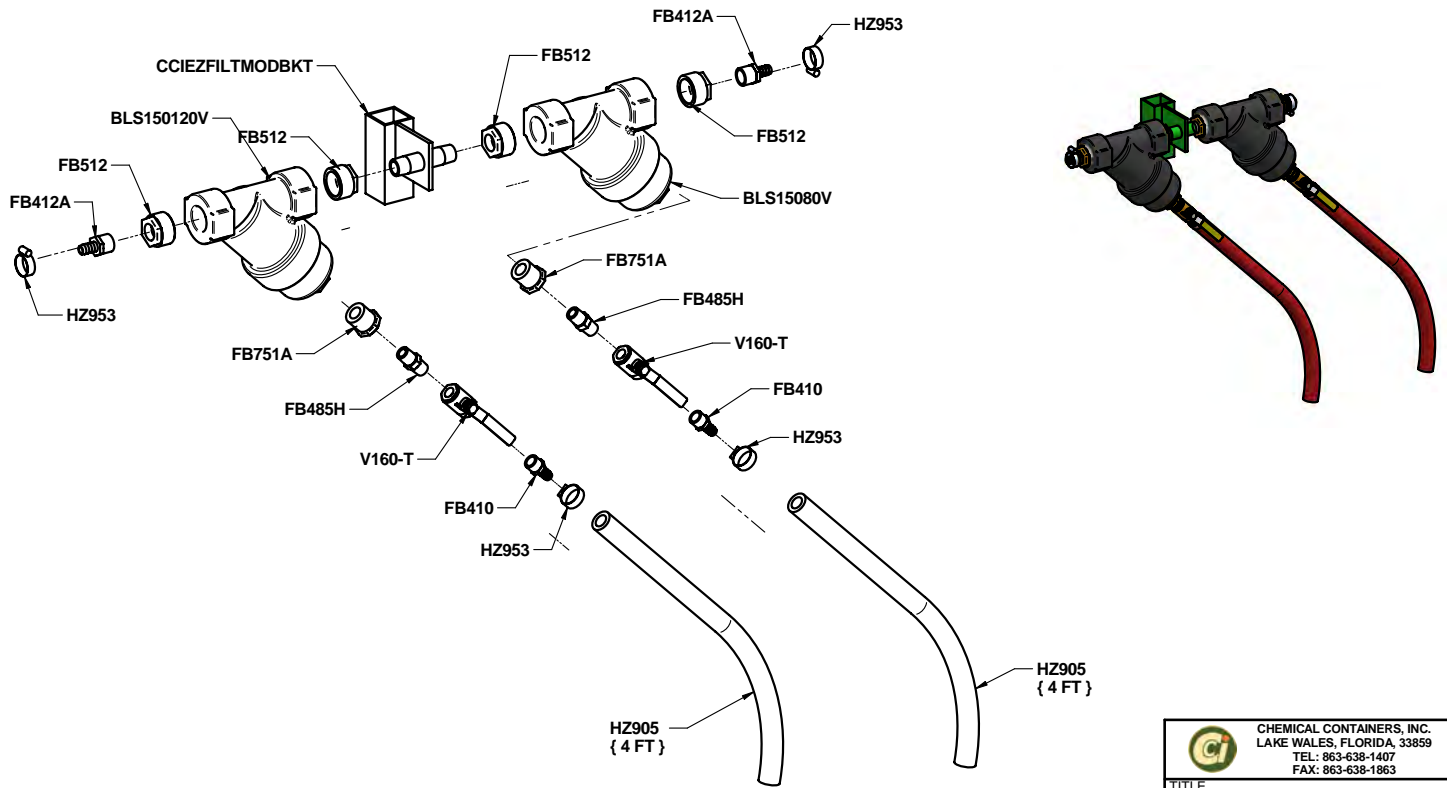



 CHEMICAL CONTAINERS, INC. LAKE WALES, FLORIDA, 33859 TEL: 863-638-1407 FAX: 863-638-1863		
TITLE		
DOUBLE FILTER MODULE		
SIZE	DWG NO	REV
B	CCIEZFILTMODA	00
COMPONENT DRAWING		
SCALE: N.A.	LAYOUT SHEET	SHEET 1 OF 1

M:\ENGINEERING\COMPONENTS\CC\TELONE\CCIEZFILTMODA.dft

4 Row Manifold Assembly


NOTES:

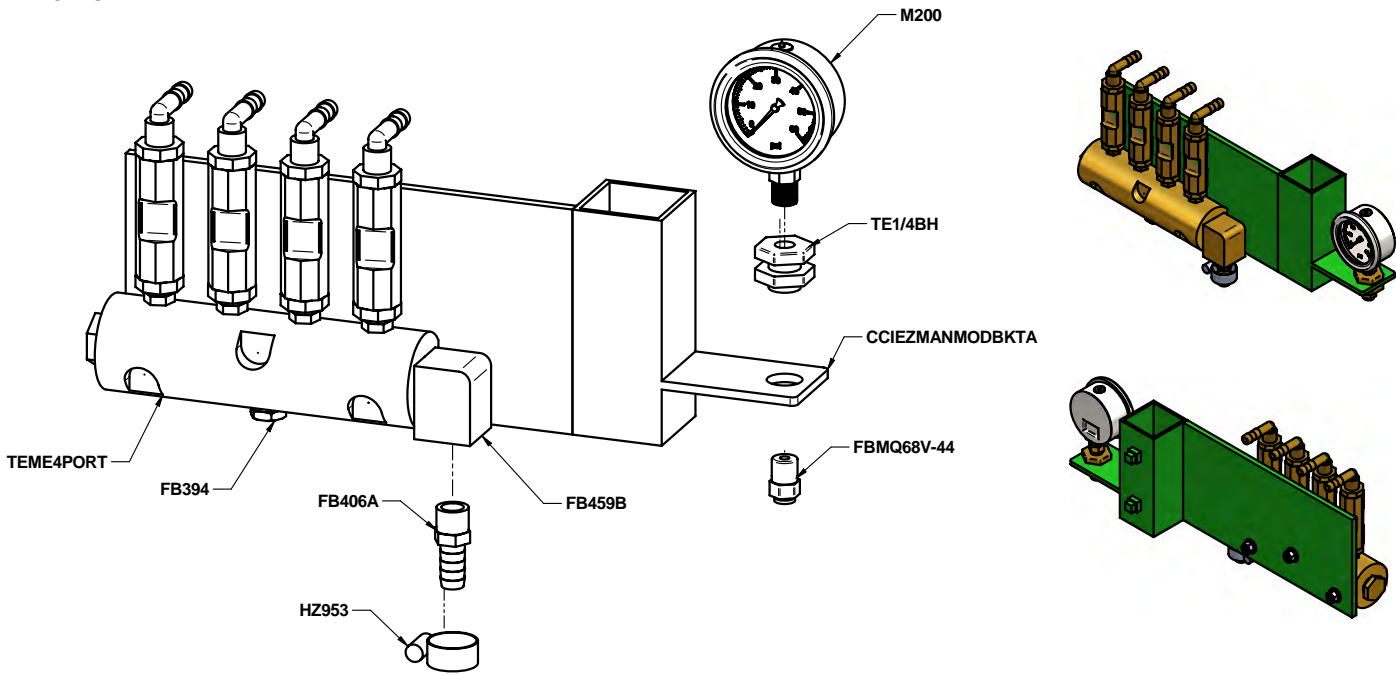

 CHEMICAL CONTAINERS, INC. LAKE WALES, FLORIDA, 33859 TEL: 863-638-1407 FAX: 863-638-1863		
TITLE		
MANIFOLD MODULE 4 PORTS		
SIZE	DWG NO	REV
B	CCIEZMANMOD - 4	00
COMPONENT DRAWING		
SCALE: N.A.	LAYOUT SHEET	SHEET 1 OF 1

M:\ENGINEERING\COMPONENTS\CC\TELONE\TELONE PRESSURE KIT\CCIEZMANMOD - 4.dft


On/Off Valve - Standard Kit

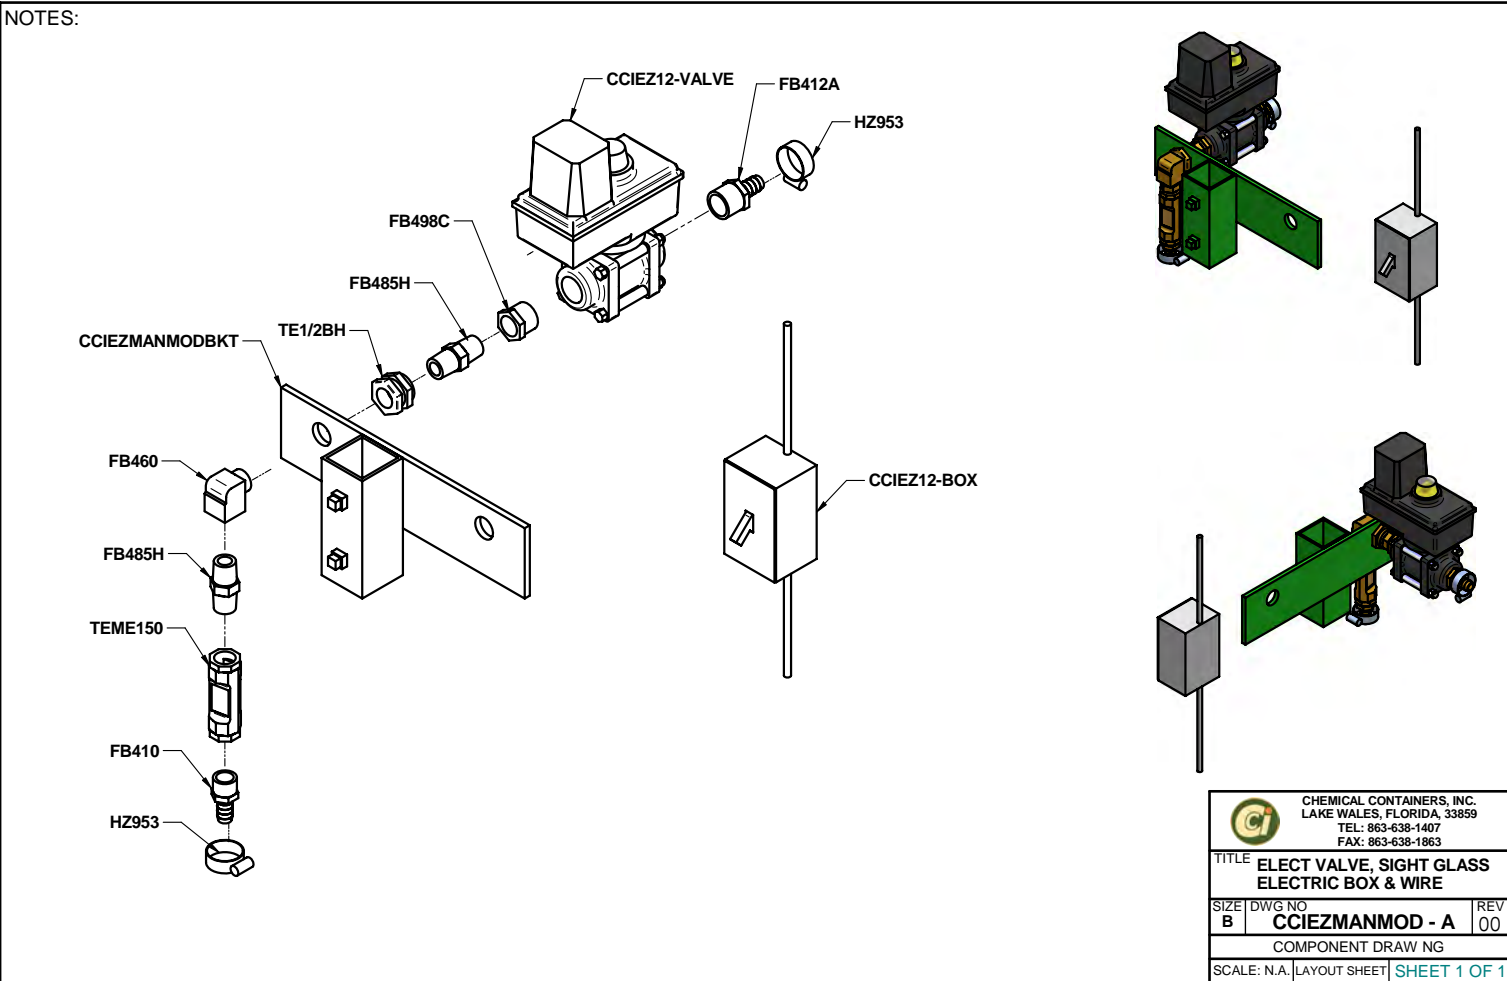


M:\ENGINEERING\COMPONENTS\CCITELONETELONE PRESSURE KIT\CCIEZMANMOD - A.dft

Nitrogen Regulator

NOTES:

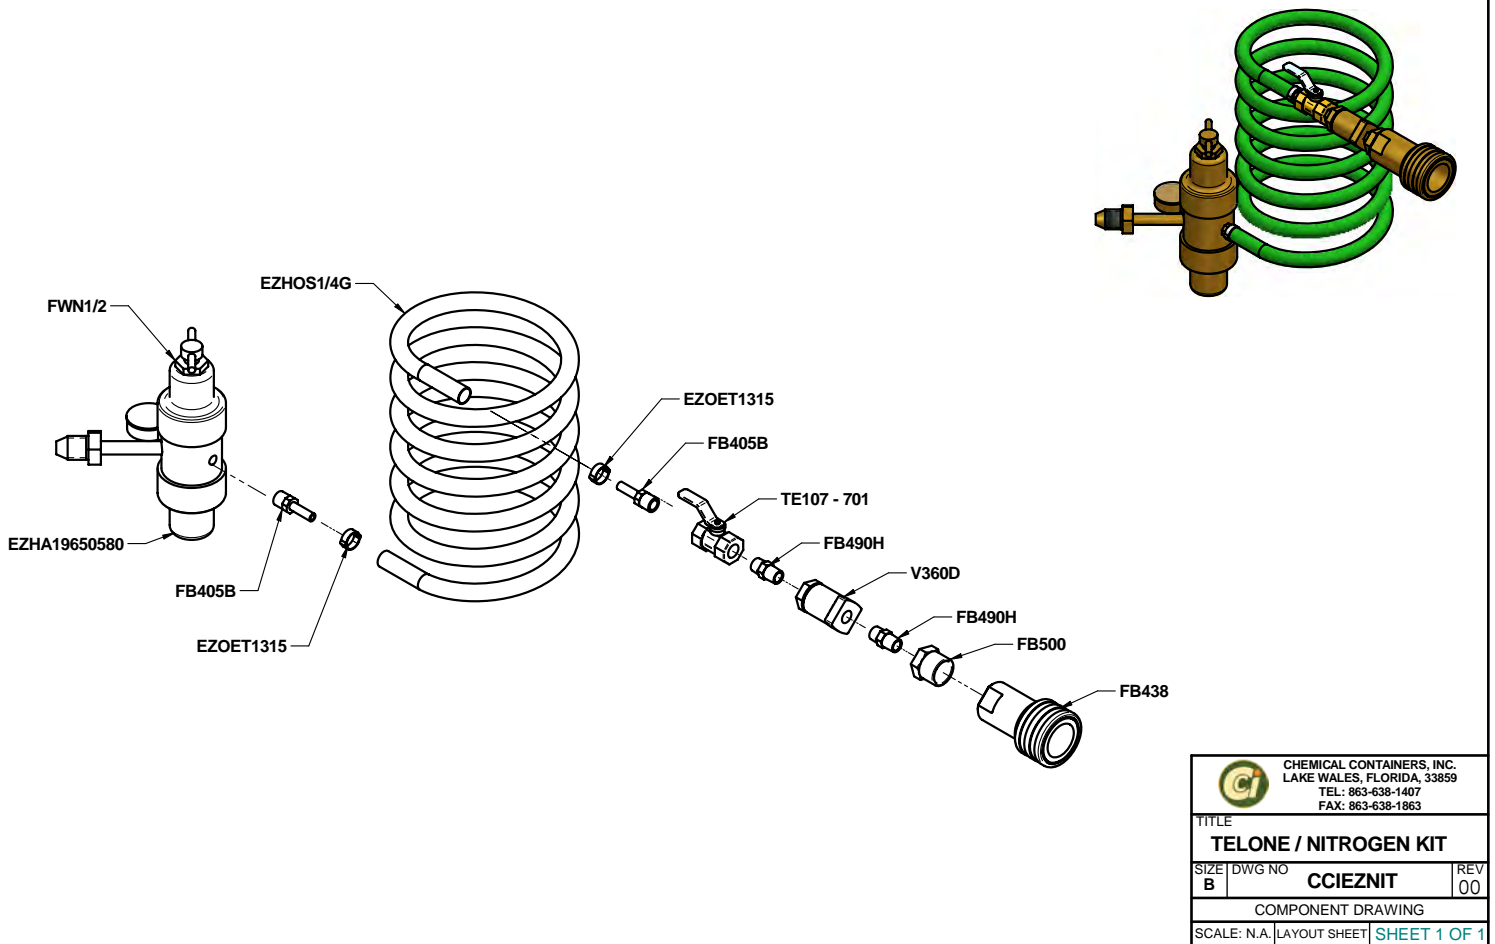



 CHEMICAL CONTAINERS, INC. LAKE WALES, FLORIDA, 33859 TEL: 863-638-1407 FAX: 863-638-1863		
TITLE		
TELONE / NITROGEN KIT		
SIZE	DWG NO	REV
B	CCIEZNIT	00
COMPONENT DRAWING		
SCALE: N.A. LAYOUT SHEET SHEET 1 OF 1		

M:\ENGINEERING\COMPONENTS\CC\TELONE\TELONE PRESSURE KIT\CCIEZNIT.dft

Transfer Regulator

NOTES:


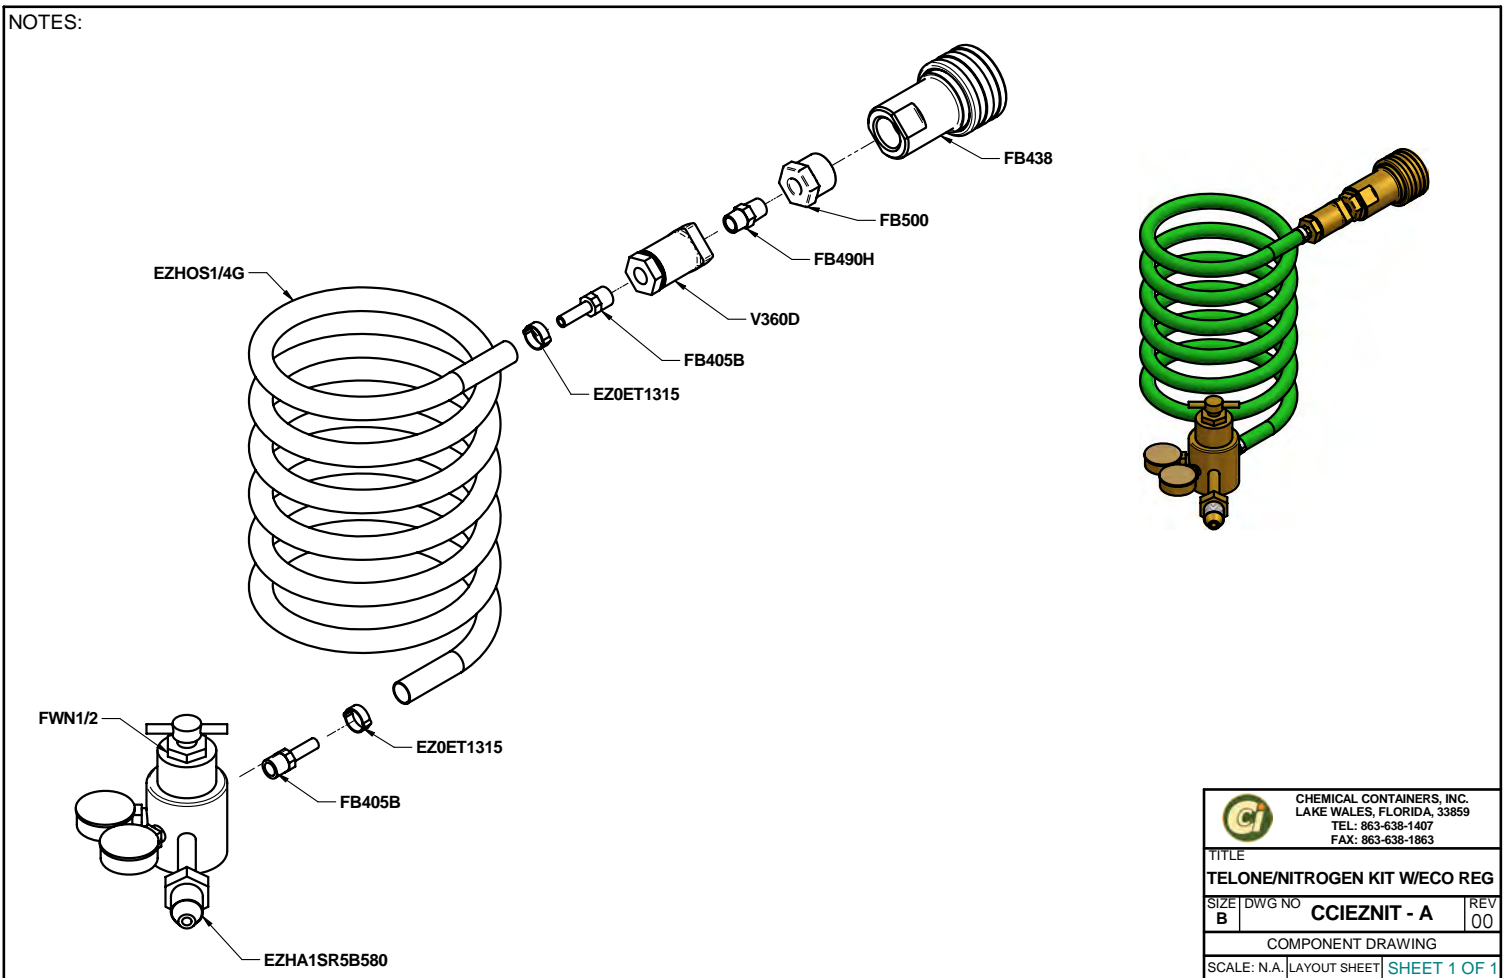


 CHEMICAL CONTAINERS, INC. LAKE WALES, FLORIDA, 33859 TEL: 863-638-1407 FAX: 863-638-1863		
TITLE		
TELONE/NITROGEN KIT WECO REG		
SIZE	DWG NO	REV
B	CCIEZNIT - A	00
COMPONENT DRAWING		
SCALE: N.A. LAYOUT SHEET SHEET 1 OF 1		


M:\ENGINEERING\COMPONENTS\CC\TELONE\TELONE PRESSURE KIT\CCIEZNIT - A.dft


Site Glass and Stand

NOTES:

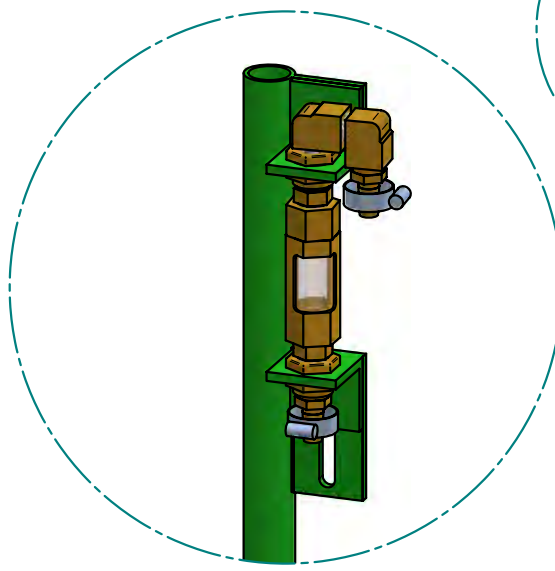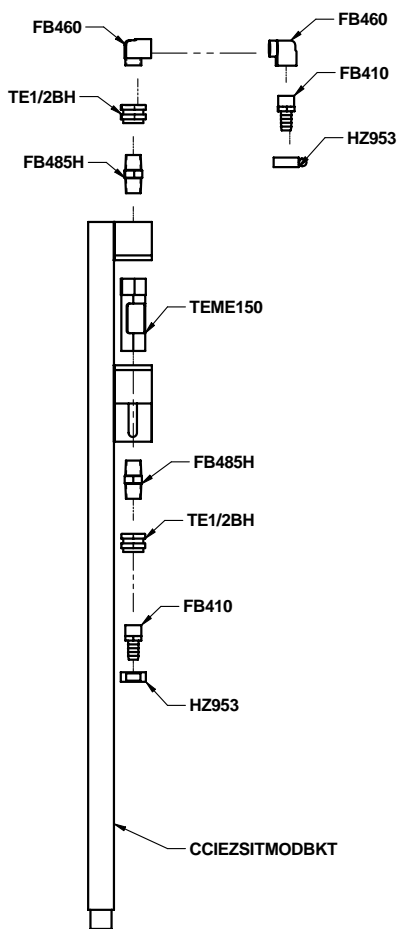

DETAIL A

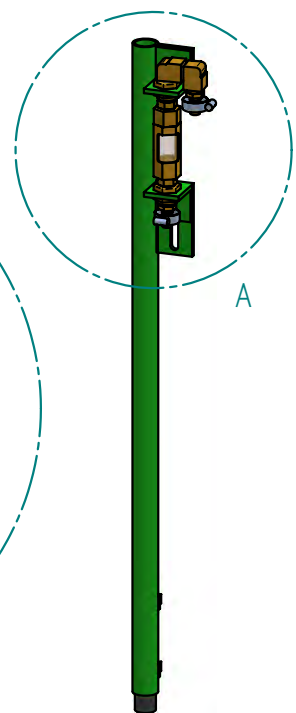



 CHEMICAL CONTAINERS, INC. LAKE WALES, FLORIDA, 33859 TEL: 863-638-1407 FAX: 863-638-1863			
TITLE			
SIGHT GLASS MODULE			
SIZE	DWG NO	REV	
B	CCIEZSITMOD	00	
COMPONENT DRAWING			
SCALE: N.A. LAYOUT SHEET			SHEET 1 OF 1

M:\ENGINEERING\COMPONENTS\CCITELONETELONE PRESSURE KIT\CCIEZSITMOD.dft

Site Glass Assembly


NOTES:

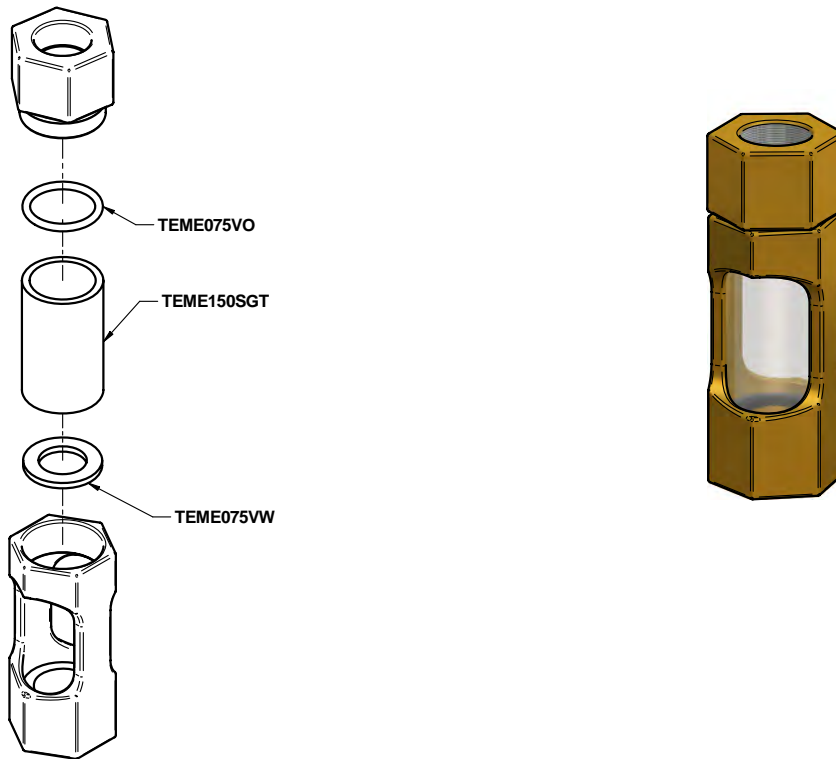

 CHEMICAL CONTAINERS, INC. LAKE WALES, FLORIDA, 33859 TEL: 863-638-1407 FAX: 863-638-1863		
TITLE		
SIGHT GLASS ASM		
SIZE	DWG NO	REV
B	TEME150	00
COMPONENT DRAWING		
SCALE: N.A.	LAYOUT SHEET	SHEET 1 OF 1


M:\ENGINEERING\COMPONENTS\CC\TELONEMATERIALS\TEME150\TEME150.dft

120 Gallon Tank

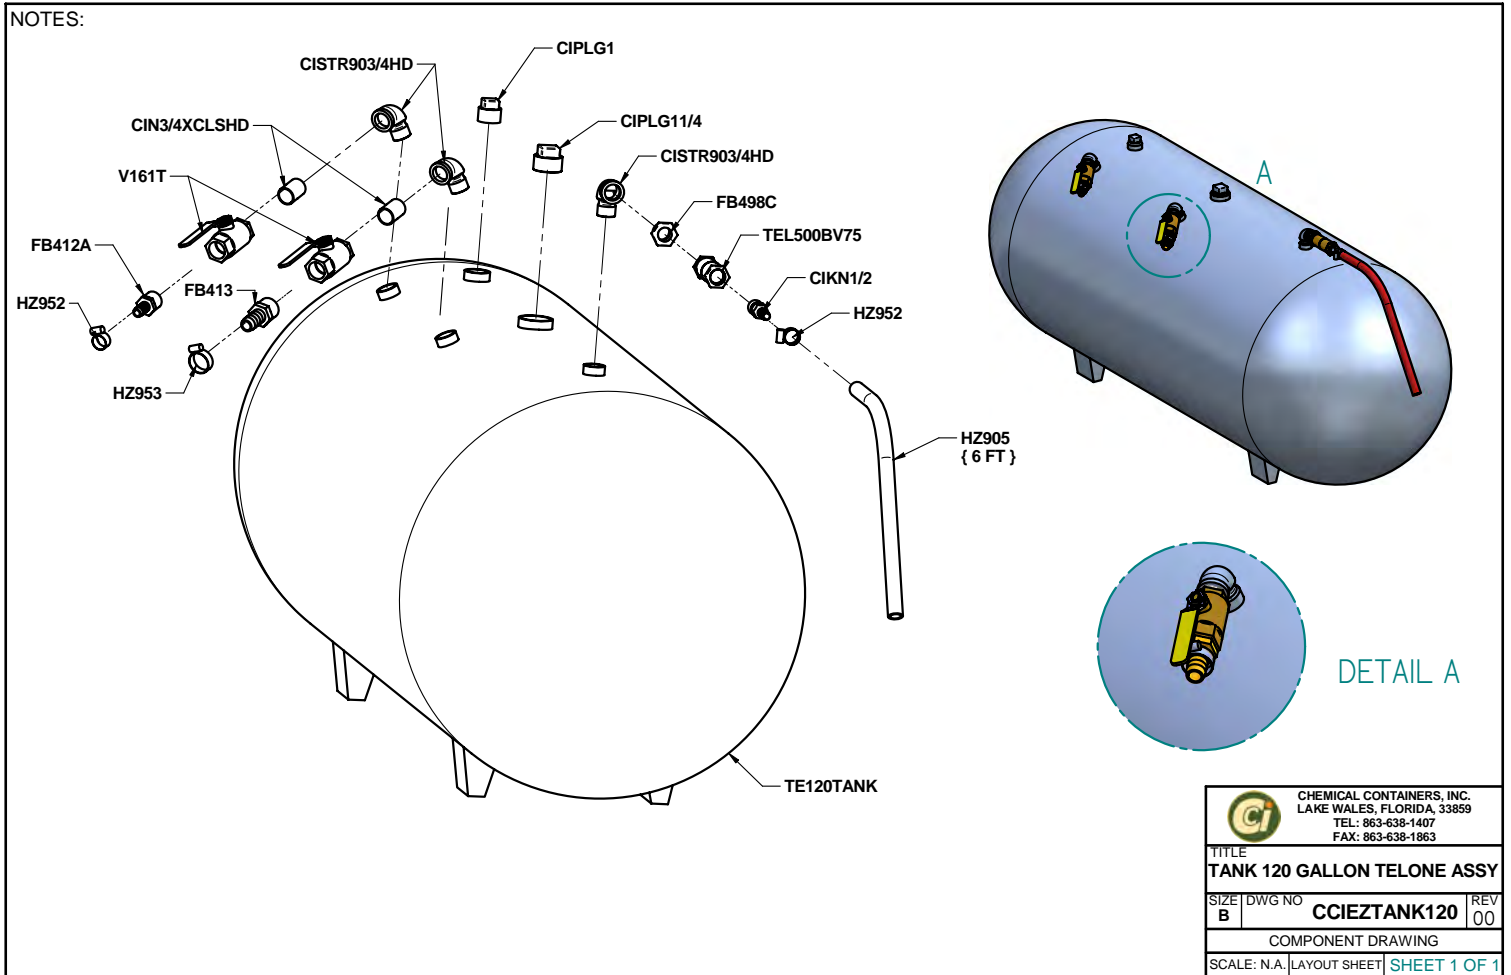

M:\ENGINEERING\COMPONENTS\CC\TELONE\CCIEZTANK120.dft


250 Gallon Tank

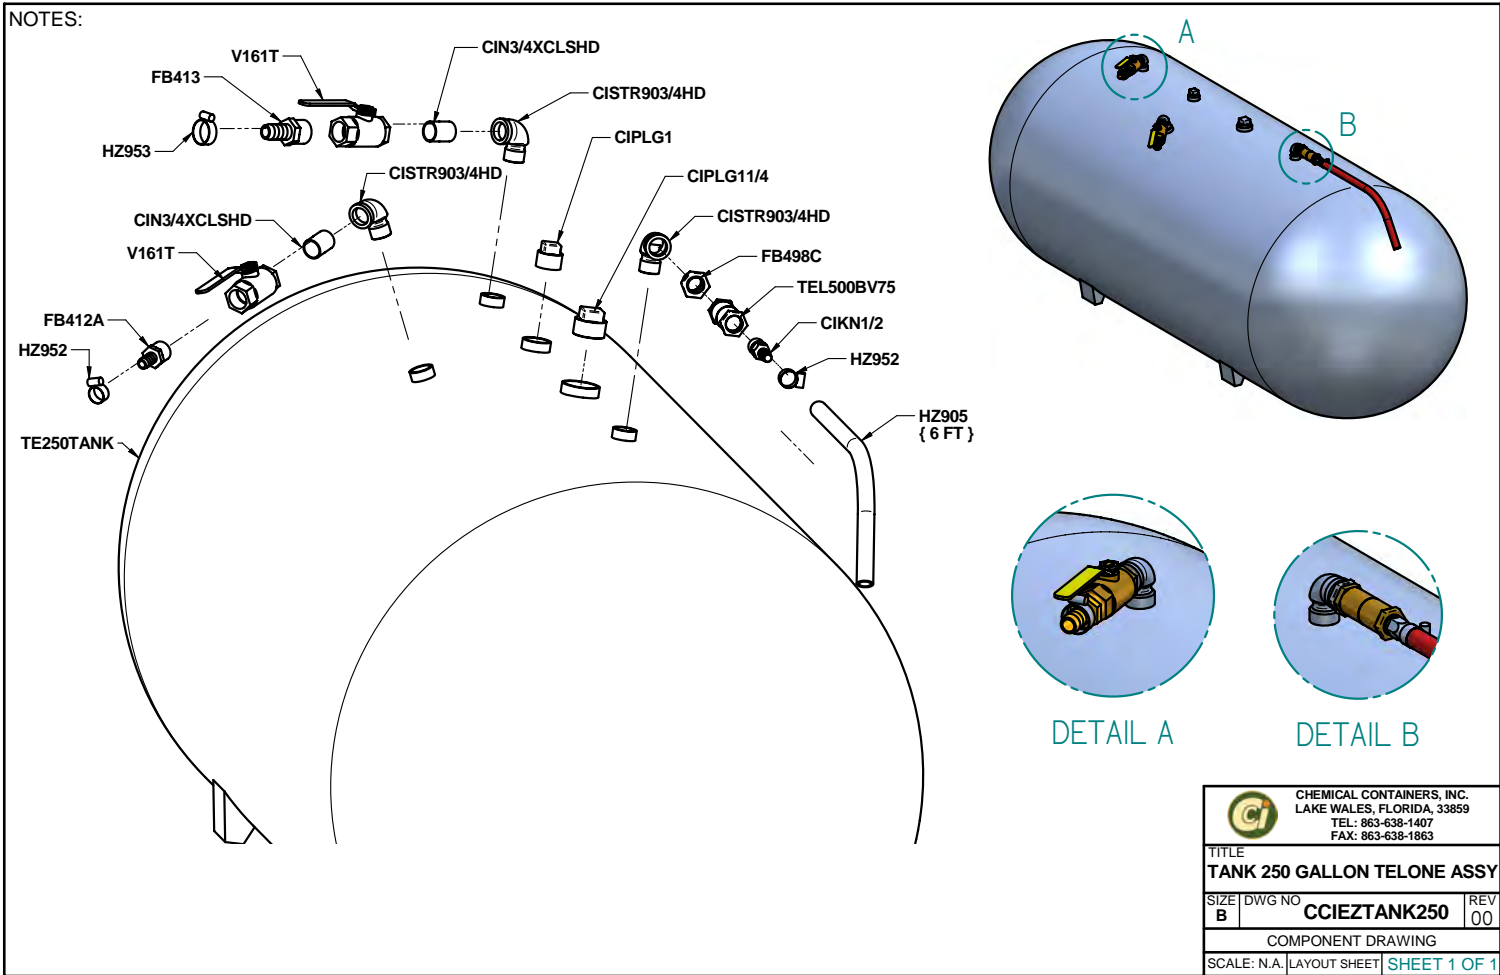


M:\ENGINEERING\COMPONENTS\CCITELONE\CCIEZTANK250.dft

On/Off Throttling Valves - Premier Kit

NOTES:


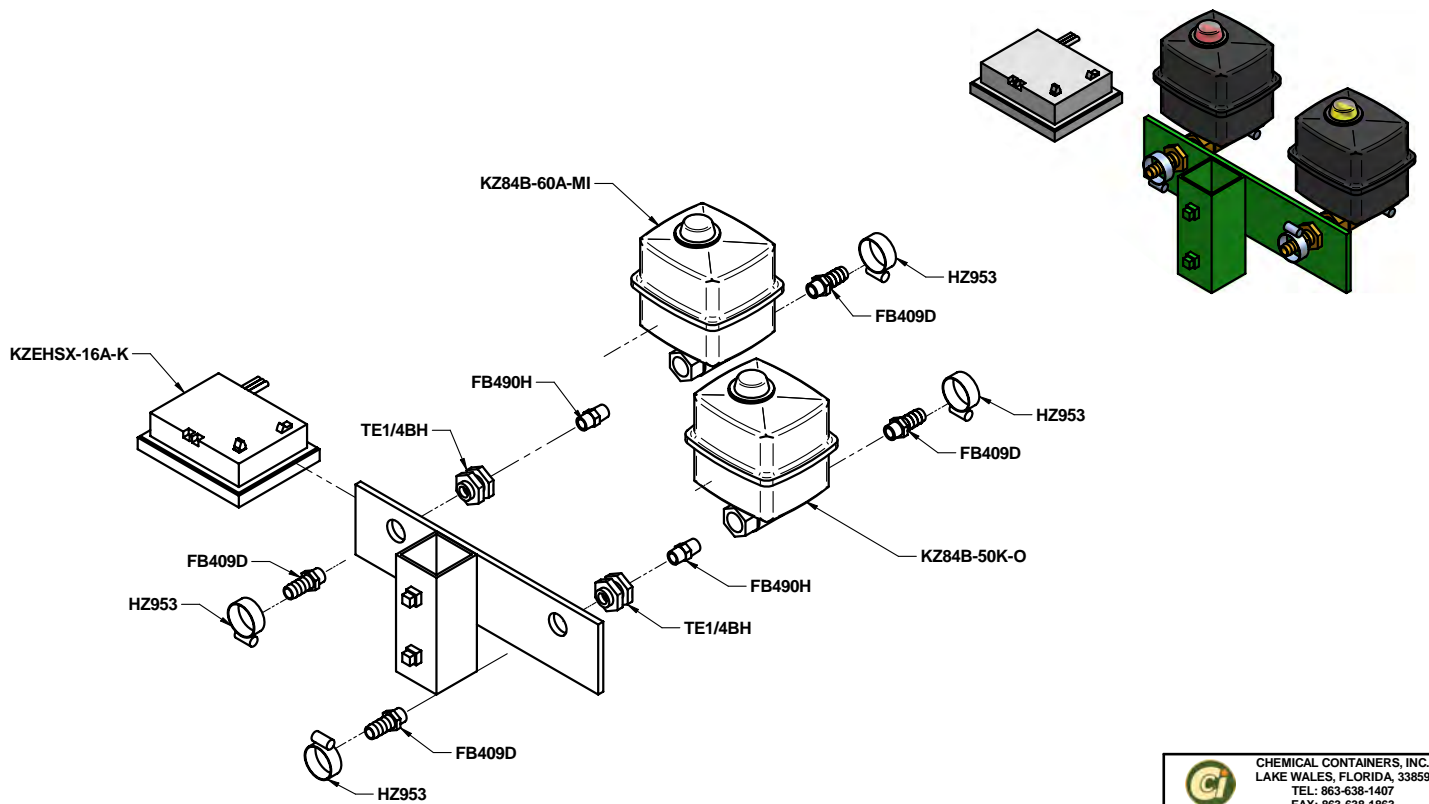



 CHEMICAL CONTAINERS, INC. LAKE WALES, FLORIDA, 33859 TEL: 863-638-1407 FAX: 863-638-1863		
TITLE	ON/OFF & THROTTLE VALVE W/CONTROLLER	
SIZE	DWG NO	REV
B	CCIEZTHRMOD	00
COMPONENT DRAWING		
SCALE: N.A.	LAYOUT SHEET	SHEET 1 OF 1

M:\ENGINEERING\COMPONENTS\CCITELONE\TELONE PRESSURE KIT\CCIEZTHRMOD.dft

Single Filter Only

PART SAA124A-4SCPP100
FOR CCIEZFILTERMOD

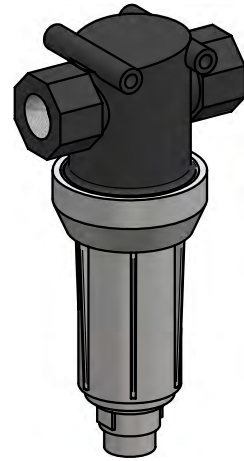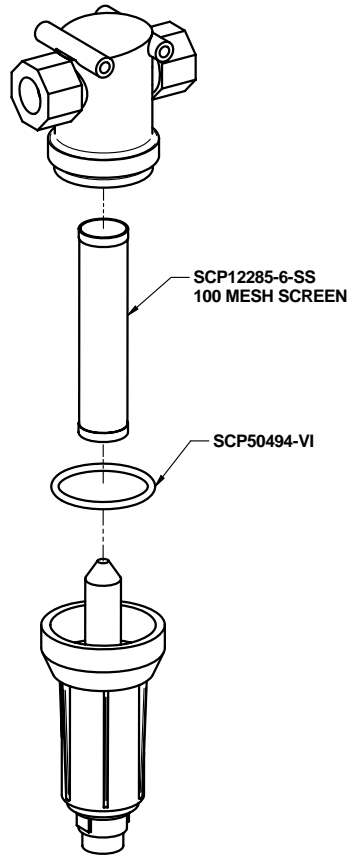

 CHEMICAL CONTAINERS, INC. LAKE WALES, FLORIDA, 33859 TEL: 863-638-1407 FAX: 863-638-1863		
		TITLE SELF CLEANING STRAINER W/ITON
SIZE B	DWG NO SAA124A 4SCPP100	REV 00
COMPONENT DRAWING		
SCALE: N.A. LAYOUT SHEET		SHEET 1 OF 1

M:\ENGINEERING\COMPONENTS\CC\TELONE\SAA124A-4SCPP100.dft